

How To Measure – Top Coats, Car Coats, Vests

Neck Width –



Chest – Measure 1" below armhole seam from end to end. Double this measurement to find the chest.



Waist – Measure at the “x” below the neck seam. Reference the inches shown below to determine where to measure across from seam to seam.



XS = 15 ½", S = 6 ¼" , R = 17"

L = 17 ¾", XL = 18 ½"

Bottom Opening – Measure across the bottom hem from seam to seam. Double this to find the bottom opening.




Shoulder – Measure from seam to seam.



Length – Measure from where the shoulder seam attaches to the lapel down to the bottom hem of the jacket.



Sleeve Hem Opening - Measure the opening of the sleeve from end to end while laid flat on surface.

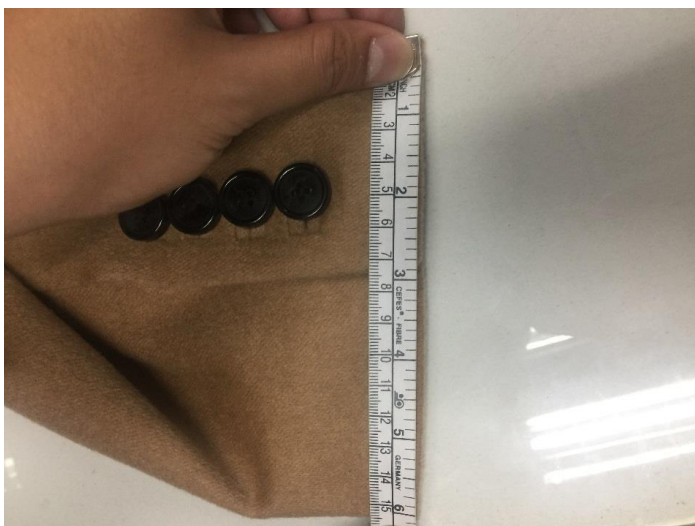

Sleeve Inseam – Lay on a flat surface and measure along the inside seam from where the sleeve starts down to the edge the sleeve.

